












# Ribbons Quick Reference

4 Knobs have unique controls across 4 pages:

-  **Mix, LP + HP filters, Compression**
-  **Wow and Flutter**
-  **Dropouts, Crinkle, Noise**
-  **Reverb, Touch Mode Controls**

**Tap the push button** to access the controls you want to edit. The LEDs track your page and show real-time parameter values.

**Select a Touch Mode** to determine what the Touch footswitch does. Hold the push button and tap Touch to change the Touch Mode:

-  **Magnetic Dance** (solid green)
-  **Tape Stop** (solid dark blue)
-  **Broken Machine** (solid light blue)
-  **Repeater** (flickering green)
-  **Crushed Cassette** (flickering dark blue)
-  **Disintegration Loop** (flickering light blue)
-  **UnrealPlayer** (solid red)




## Presets


- **Enter / exit:** hold push button for 3 secs
- **Toggle preset slots:** tap push button  
**1, 2, 3, 4 are red**, and **5, 6, 7, 8 are blue**
- **Load preset slot:** tap Touch
- **Overwrite slot with live settings:** tap Bypass 2x
- **Load INIT (preset 1) to start from scratch**

## 4-Track Looper


- **Enter / exit:** hold push button + tap Bypass
- **Toggle between tracks:** tap push button
- **Record or overdub:** Touch (momentary or latched)
- **Clear current track:** hold push button + tap Touch
- **Clear all tracks:** hold push button for 3 secs

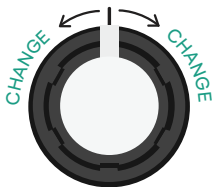


**DIRECTION**

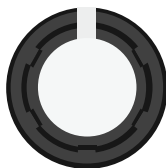

**VOLUME**

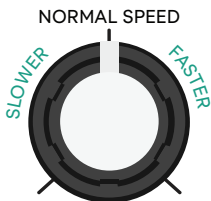

**SPEED**

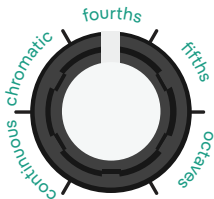

**SPEED SCALE**